

۲

This device must be used in accordance with the instructions.



۲

SECOND POUR <u>/ 45</u>°





۲

1.5 Allow first pour to settle for approximately 60 seconds.

1.6 Angle can at 45° to slowly top up the glass, forming the classic Guinness domed head. Do not push up the button for the second pour, this starts automatically.



Clean before and after every use under warm running water. Do not wet USB cable and ensure USB port is closed with rear rubber cover before washing to avoid water entering. Do not clean the appliance in dishwasher/ glass washer. Clean nozzle regularly with supplied brush.

# SAFETY INFORMATION

# Important safety information

Read this important information carefully before you use the appliance and its accessories and save it for future reference. Store in a safe place appliance must be kept out of reach of children at all times. The accessories supplied may vary for different products.

Danger - Do not wet USB cable and ensure USB port is closed with rear rubber cover before washing to avoid water entering.

# Warning

The supply unit contains a Micro-USB/USB-A charging cable. Use with standard 5V 500mA USB power source - not supplied with product.
This appliance should only be used by persons of legal drinking age and

above

Appliance must be kept out of reach of children at all times. Cleaning and user maintenance shall not be carried out by children. - Always remove USB cable and unplug from power source before washing

the device. Remember to close rear rubber cover before wetting.

Always check the appliance before you use it. Do not use the appliance if it is damaged, as this may cause injury.

 Do not attempt to open the appliance. It has been ultrasonically sealed and contains no user-serviceable parts.

 This appliance can be used by persons with reduced physical, sensory or metal capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

# SAFETY INFORMATION cont.

### Caution

- Never immerse the charging cable in water. Do not rinse it under the tap.
- Never immerse the appliance in water
- Do not use the appliance in dishwasher/glass washer
- otter than 60°C to rinse the appliance. Never use water h
- Only use this appliance for its intended purpose as shown in user manual. -Never use compressed air, scouring pads, abrasive cleaning agents or
- aggressive liquids such as acetone to clean the appliance. Unit should be cleaned before and after each use with warm water.





### 2 General

This appliance be can safely cleaned under the tap (Fig. 1). Clip in rear rubber cover when not

in charging mode - Store in a safe dry area when not in use.

#### Removing the rechargeable battery

This device is ultrasonically welded and sealed and cannot be opened without professional equipment. The batteries cannot be removed. It MUST be disposed of at an official collection point.

## Safety Standards

EN 60335-1:2012+A2:2019+A14:2019 EN 62233:2008 EN 55014-1:2017/A11:2020 EN 55014-2:2015 EU 2020/1245



۲







To charge, connect the Micro USB lead supplied to a USB power source. Full charge takes 8 hours.

The Harp illuminates to show status as above:

# This unit contains 2 NiMH AAA rechargeable batteries.

- Voltage: DC 2 x 1.2V

- Electrical products and batteries should not be disposed of with normal household waste.

BATTERY

Follow your country's rules for the separate collection of electrical products and batteries.

#### INFORMA SAFE **ON** Т Υ Т

## **Electromagnetic Compatibility (EMC)**

 This appliance complies with all applicable standards and regarding emission of, and immunity to, electromagnetic fields. and regulations

#### TY INFORMATION SAFE cont

## Recycling

This symbol means that this product shall not be disposed of with normal

- This symbol means that this product contains a built-in rechargeable battery which shall not be disposed of with normal household waste (2006/66/EC) (Fig. 2).

Follow your country's rules for the separate collection of electrical and electronic products and rechargeable batteries. Correct disposal helps prevent negative consequences for the environment and human health.

### Manufacturer and Distributor

Manufactured by Raymond Industrial Ltd, incorporated and registered in Hong Kong PRC with company number (017700220-000-10-19-9). Distributed by Diageo Ireland, incorporated and registered in Dublin, Ireland with company number (22876).

# WARRANTY

## Warranty and support

If you need information or support, please visit www.GUINNESS.com

The rights provided to you under this limited warranty are provided in accordance with and in addition to all rights and remedies conveyed to you by applicable consumer laws and regulations and do not restrict or affect your statutory rights. DIAGEO warrants to the buyer ("You"), that, for a period of one 1 year after you purchase (the "Term") the Guinness NitroSurge device (the "Product"), the Product shall be free from defects in materials (including the hattery) and workmanching when used in in materials (including the battery) and workmanship when used in accordance with the Product manual which is enclosed in the Product box at the time of purchase. Reference to DIAGEO means DIAGEO Ireland of St. James' s Gate, Dublin 8, Dublin Ireland if You are resident in the Republic of Ireland ("ROI") and DIAGEO Northern Ireland Limited, of Third Floor Capital House, 3 Upper Queen Street, Belfast, Northern Ireland if You are resident in Northern Ireland ("NI").

Any claim for breach of this warranty must be delivered in writing to Diageo Consumer Careline, St James Gate, Dublin, 8 or 3 Upper Queen Street, Belfast, BTI6FB OR by email at: gbandireland@diageo.com within the Term. If a defect covered by this limited warranty is validated by DIAGEO and You return Your Product during the Term, DIAGEO will replace the Product with another product with the same or similar functionality to the Product with purchased. Proof of purchase is required. Such remedy shall not extend the Term. Due to technological developments, the replacement product may differ slightly to the Product that You originally purchased. Replaced products provided under this limited warranty will only be shipped to addresses within ROI and NI, where the Product is available for sale to customers. This limited warranty is only available to customers resident in ROI or NI.

۲

# WARRANTY cont.

۲

This limited warranty will not apply to any defect in the Product arising from ¦ t∉ lu ina scra (in u m

put the Product in the dishwasher or fully submerge the Product under water or do not close the USB rubber seal when in water or any other cleaning solutions than those recommended in the Product manual), negligence by You or any third party, alterations or repair, or use of the Product in any way that does not follow the Product manual or any other safety instructions.



Please scan for more information and pouring videos.

